



## Measuring Guide for Danmar Helmets

Measure the head circumference around the entire head (A) at eyebrow level. Occipital measurement (B) is taken from eyebrow level to the back of the head at the point that the helmet is to end. Measure the distance over the top of the head (C) to top of ears.

Use the (A) circumference for a guideline (it's the only measurement that CANNOT be larger than the helmet you're ordering or it will not fit on the head). If the B and C measurements are smaller than what's indicated for the size this can be remedied by use of Cushion Pads on page 951.

Size	Halo	Soft Shell	Full Coverage Soft Shell	Hard Shell
XX-Small	—	(A): 18 $\frac{1}{4}$ " , (B): 12 $\frac{3}{4}$ " , (C): 8 $\frac{1}{4}$ "	—	(A): 18" , (B): 12 $\frac{1}{2}$ " , (C): 9 $\frac{1}{4}$ "
X-Small	—	(A): 20 $\frac{1}{2}$ " , (B): 14" , (C): 10 $\frac{3}{4}$ "	—	(A): 19 $\frac{1}{4}$ " , (B): 13 $\frac{1}{4}$ " , (C): 10"
Small	(A) 21 $\frac{1}{2}$ "	(A): 21 $\frac{1}{2}$ " , (B): 15 $\frac{1}{4}$ " , (C): 10 $\frac{3}{4}$ "	(A): 21 $\frac{5}{8}$ " , (B): 14" , (C): 10"	(A): 21 $\frac{1}{2}$ " , (B): 15" , (C): 11 $\frac{1}{2}$ "
Medium	(A) 22 $\frac{1}{4}$ "	(A): 22 $\frac{1}{4}$ " , (B): 15 $\frac{3}{4}$ " , (C): 11"	(A): 22 $\frac{3}{4}$ " , (B): 15 $\frac{1}{2}$ " , (C): 11 $\frac{1}{2}$ "	(A): 22" , (B): 16 $\frac{3}{4}$ " , (C): 12 $\frac{1}{4}$ "
Large	(A) 23 $\frac{3}{4}$ "	(A): 23 $\frac{1}{2}$ " , (B): 16 $\frac{3}{4}$ " , (C): 12"	(A): 24 $\frac{1}{2}$ " , (B): 16 $\frac{1}{2}$ " , (C): 12 $\frac{1}{4}$ "	(A): 23 $\frac{3}{4}$ " , (B): 17" , (C): 13 $\frac{1}{4}$ "
X-Large	(A) 24 $\frac{1}{2}$ "	—	(A): 25 $\frac{1}{2}$ " , (B): 17 $\frac{1}{4}$ " , (C): 13"	(A): 24 $\frac{1}{2}$ " , (B): 16 $\frac{1}{2}$ " , (C): 13"