


#924527

Assembly

Unscrew the Adjustment Knob from the old Trunk Support and replace with the Adjustable Trunk Support (fig. A). Follow the assembly instructions in the Tristander Manual.

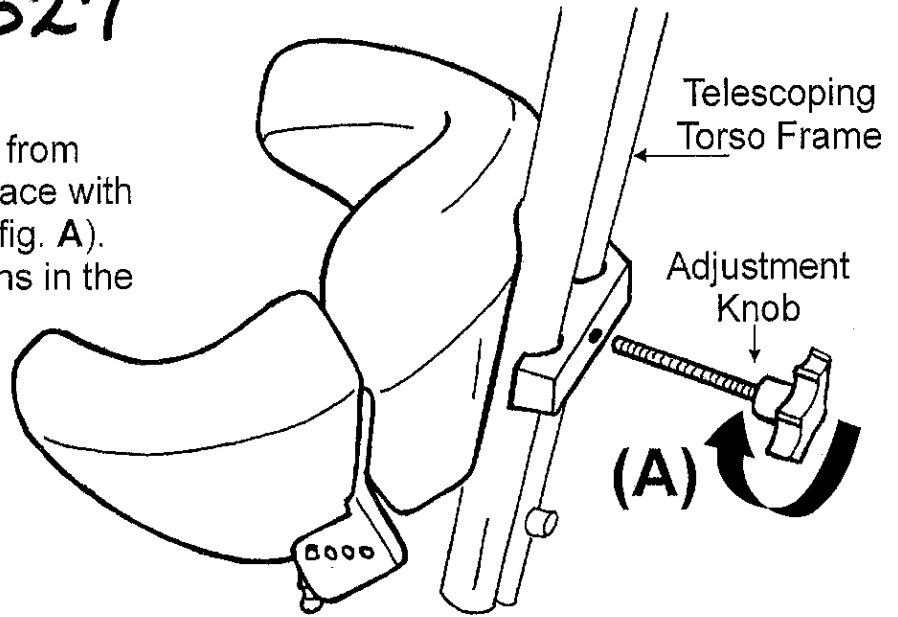

To Adjust

Pull down and hold pin (fig. B). Adjust side supports to fit child (fig C). Release pin and lock in at desired setting.

